


Sonicgrace

Multifunctional Charging Station for NS 2 Product Manual (SG-SDS-17)

Product Diagram:

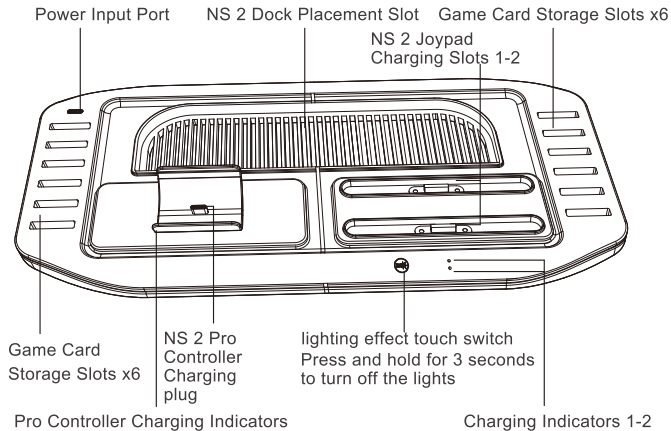

Features:

1. A multifunctional stand designed for use with the original NS 2 Dock.
2. Supports simultaneous charging of up to two NS 2 Joypads and one NS 2 Pro controller with individual charging indicators.
3. Equipped with a Type-C port to receive power from the NS 2 Dock.
4. Includes a touch lighting switch with 9 adjustable light effects.
5. Comes with 12 game card slots for convenient storage and use.

Technical Specifications:

Input Voltage: DC 5V

NS2 Pro Controller Charging Current: 550mA

Single Joypad Charging Current: 200mA

Charging Time: Approximately 2.5-3.5 hours

Instructions for Use:

1. Place the original NS 2 Dock into the groove of the charging base. Connect one end of the included charging cable to the power input port of the charging base, and the other end to the USB port of the NS 2 Dock to provide power.
2. After powering on, the indicator lights for the four charging slots will turn solid blue.
3. Insert NS 2 Joypad or NS 2 Pro controller into the charging slots. While charging, the corresponding indicator will stay steady orange. When fully charged, the indicator will turn steady blue.
4. The product includes a lighting effect touch switch with 9 adjustable lighting modes. Press the switch to cycle through the 9 effects; Press and hold for 3 seconds to save the current effect and turn off the lights. Press briefly again to restore the saved lighting effect.

Precautions:

1. Do not store the product in humid or high-temperature environments.
2. Avoid hitting, dropping, puncturing, or disassembling the product to prevent damage.
3. Unauthorized disassembly voids the warranty.
4. Dispose of the product properly through qualified recycling organizations.
5. Do not use the product for charging controllers other than original NS 2 Joypads and original NS 2 Pro controller.
6. When the product is connected to the original NS2 dock to charge the NS2 Pro controller and NS2 Joypad controllers, if the NS2 console is inserted or removed, or if the console enters sleep mode during the charging process, the power will disconnect twice and then automatically restore. This is a normal phenomenon.

 
Package Contents:



Charging Station ×1



USB Cable ×1



User Manual ×1